 


SONOFF

TX T4EU1C

 
User manual V1.1

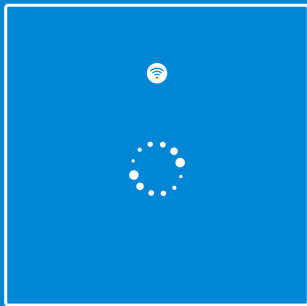

Wi-Fi智能墙壁触摸开关(单火版)
Wi-Fi Smart Wall Switch(Single Live Wire)


安装说明

1 断电

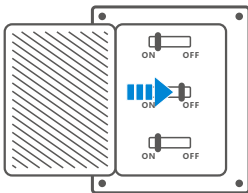

⚠ 设备安装、故障维修请由专业资质电工操作，以免发生触电危险！

 2 接线

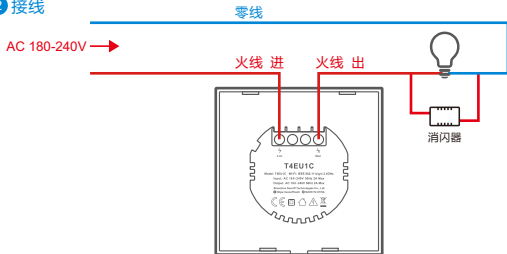

Ⓢ 设备只能接灯具使用，接线时需先在灯的零火线上接入消闪器，方能正常使用。

3 下载APP



 
4 上电

通电后，设备首次使用，默认进入快速模式(Touch)，Wi-Fi指示灯呈两短一长闪烁状态。

① 三分钟内没有进行配网，设备将退出快速模式。如需再次进入，长按触摸开关键5秒直到Wi-Fi指示灯呈两短一长闪烁即可。

5 添加设备


点击“+”，根据app提示操作。

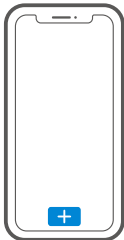

产品参数

产品型号	T4EU1C	Wi-Fi	IEEE 802.11 b/g/n 2.4GHz
最大输入	AC 180-240V 50Hz 2A	产品材料	ABS V0+钢化玻璃
最大输出	AC 180-240V 50Hz 2A	产品规格	86x86x35mm
最大负载	LED灯: 100W, 白炽灯: 300W		
支持平台	(Android 4.1 & iOS 9.0) 或者更高版本		

 产品介绍

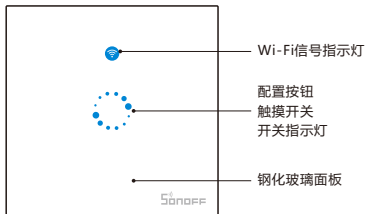

产品特点

T4EU1C是一款Wi-Fi智能墙壁触摸开关（单火版），用您的智能手机在任何地方打开或关闭家里的灯具，设置定时开关、分享给您的家人控制等等。



APP远程控制



智能定时



语音控制



分享控制



无需交换机



触摸控制



 
场景联动



局域网控制

恢复出厂设置

长按配置按钮5秒直到Wi-Fi指示灯呈两短一长闪烁再松开，此时设备重置成功，默认进入快速模式(Touch)。

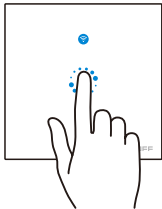

Ⓢ 更换新的网络环境使用时，需要恢复出厂设置，再重新进行网络连接。

常见问题

问：设备添加成功后，显示离线，无法控制？

答：设备刚添加成功后，需要1-2分钟时间连接您的路由器并连网。如果长时间还是显示不在线，请根据Wi-Fi蓝色指示灯的状态来判断：

1. 蓝灯1秒快闪一下：说明设备没有连上您的Wi-Fi。

- ① 可能是Wi-Fi密码输入不正确。
- ② 可能是设备离您的路由器太远，信号太弱，或环境有干扰。请先将设备靠近路由器，如无改善，重新添加一遍。
- ③ 设备不能识别5G的Wi-Fi，请选择2.4G的Wi-Fi重新添加。
- ④ 检查您的路由器后台是否开启MAC地址过滤，如有，请关闭。

如果以上均尝试不能解决，请用一部手机开启个人热点，尝试重新添加。

2. 蓝灯1秒快闪两下：说明设备已连接到了Wi-Fi但没有连上外网。

请确认您的Wi-Fi当前连接外网是否稳定、正常。如时好时坏，频繁出现这种双闪情况，说明您的网络不稳定，并非产品原因，如网络正常，请断电进行重启。

扫码阅读使用天猫精灵、Echo、google语音控制教程。

 


<https://www.sonoff.tech/usermanuals>

扫码或输入网址查看最新的说明书和帮助。


Installation Guide

1 Power off

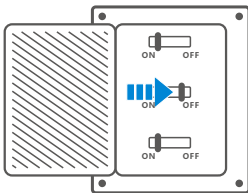

⚠ To avoid electric shocks, please consult the dealer or a qualified professional for help when installing and repairing.

 2 Wiring instruction

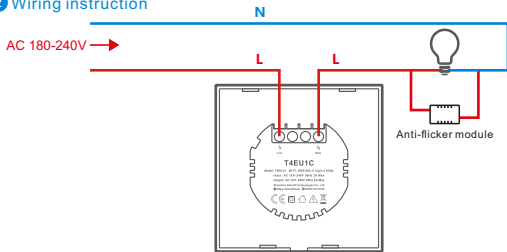

ⓘ The switch can only be connected with light fixture. When connect, the anti-flicker module is required to connect with the live and neutral wire for normal work.

3 Download the APP



4 Power on

After powering on, the device will enter the quick pairing mode (Touch) during the first use. The Wi-Fi LED indicator changes in a cycle of two short and one long flash.

ⓘ The device will exit the quick pairing mode (Touch) if not paired within 3mins. If you want to enter this mode, please long press the Touch switch for about 5s until the Wi-Fi LED indicator changes in a cycle of two short and one long flash and release.

5 Add the device


Tap "+" to operate following the prompt on the APP.



Specifications

Model	T4EU1C	Wi-Fi	IEEE 802.11 b/g/n 2.4GHz
Max. input	AC 180-240V 50Hz 2A	Materials	ABS V0+tempered glass panel
Max. output	AC 180-240V 50Hz 2A	Dimension	86x86x35mm
Max. Load	LED lamp: 100W, Incandescent lamp: 300W		
Operating systems	(Android 4.1 & iOS 9.0) or higher		

 Product Introduction

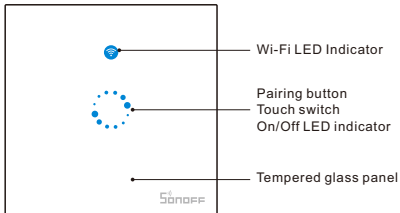

Features

T4EU1C is a Wi-Fi smart wall switch (single live wire) that can turn on/off lights, schedule power on/off and share lights with your family to control.



APP Control



Timing Schedule



Voice Control



Share Control



No Hub Required



Touch Control



 
Smart Scene



LAN Control

Factory Reset

Long press Pairing button you desired to pair for about 5s until the Wi-Fi LED indicator changes in a cycle of two short and one long flash and release, then the reset is successful. The device enters quick pairing mode (Touch).

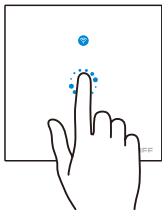

ⓘ Please reset the switch to factory defaults if you want to use other Wi-Fi networks, then reconnect the network.

Common Problems

Q: Why my device stays "Offline"?

A: The newly added device needs 1 - 2mins to connect Wi-Fi and network. If it stays offline for a long time, please judge these problems by the blue Wi-Fi indicator status:

1. The blue Wi-Fi indicator quickly flashes once per second, which means that the switch failed to connect your Wi-Fi:

- ① Maybe you have entered a wrong Wi-Fi password.
- ② Maybe there's too much distance between the switch your router or the environment causes interference, consider getting close to the router. If failed, please add it again.
- ③ The 5G Wi-Fi network is not supported and only supports the 2.4GHz wireless network.
- ④ Maybe the MAC address filtering is open. Please turn it off.

If none of the above methods solved the problem, you can open the mobile data network on your phone to create a Wi-Fi hotspot, then add the device again.

2. Blue indicator quickly flashes twice per second, which means your device has connected to Wi-Fi but failed to connect to the server.

Ensure a steady enough network. If double flash occurs frequently, which means you access an unsteady network, not the product problem. If the network is normal, try to turn off the power to restart the switch.

Scan the QR code to read the voice control instruction for Amazon Echo and Google Home.



<https://www.sonoff.tech/usermanuals>

Scan the QR code or visit the website to learn the detailed user guide.

SONOFF

深圳松诺技术有限公司

地址: 深圳市南山区西丽街道同沙路32号半里花汇9栋8楼

官网: <https://sonoff.tech> 服务热线: 0755-27955416

中国制造

Shenzhen Sonoff Technologies Co., Ltd.

Room 1001, 10F, Building 8, Lianhua Industrial Park, Longyuan Road, Longhua District, Shenzhen, GD, China

Website: <https://sonoff.tech> Service email: support@itead.cc

MADE IN CHINA

